

## Headlights

### ► Type A




- 1 The daytime running lights turn on.
- 2 The instrument panel, side marker, tail, daytime running lights and license plate lights turn on.
- 3 The headlights and all lights listed above (except daytime running lights) turn on.
- 4 The headlights, parking lights/daytime running lights and other lights turn on/off automatically in accordance with ambient light levels.

### ► Type B



- 1 The daytime running lights turn on.
- 2 The instrument panel, side marker, tail, daytime running lights and license plate lights turn on.
- 3 The headlights and all lights listed above (except daytime running lights) turn on.
- 4 The headlights, parking lights/daytime running lights and other lights turn on/off automatically in accordance with ambient light levels.

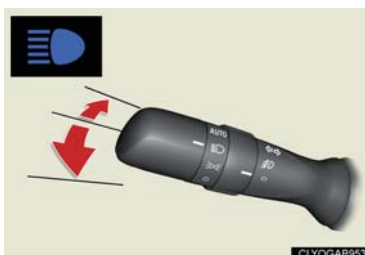

To engage the high beams, push the lever forward.  
To flash the high beams temporarily, pull the lever toward you.

## Fog Lights

### ► Type A



The fog lights can be used only when the headlights (low beam) are on.

### ► Type B



The fog lights can be used only when the headlights (low beam) are on.

## Windshield Wipers and Washer

### ► Type A




- 1 Automatic operation
- 2 Low speed
- 3 High speed
- 4 Single wipe
- 5 Wash and wipe

### ► Type B



- 1 Automatic operation
- 2 Low speed
- 3 High speed
- 4 Single wipe
- 5 Wash and wipe

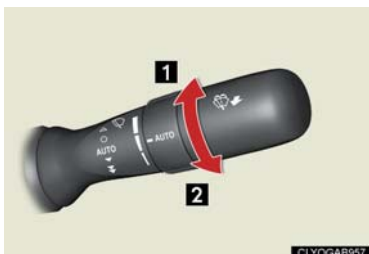

When the wipers are set to automatic operation, sensor sensitivity can be adjusted by turning the band.

- 1 Increases the sensitivity (+)
- 2 Decreases the sensitivity (-)

## Rear Window and Outside Rear View Mirror Defoggers

### ► Without navigation system



To defog the rear window and the outside rear view mirrors, press the switch.


Press again to cancel.

### ► With navigation system



The system turns off automatically after 15 to 60 minutes.

## Instrument Panel Light Control

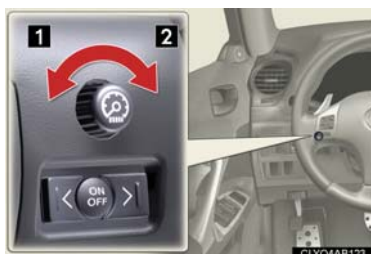

- 1 Darker
- 2 Brighter